

OUTMARK

HARLEKIN

PORTABLE STEREO AM/FM RADIO WITH
CD-PLAYER AND CASSETTE
CDC-1701





INSTRUCTION MANUAL

For more information, www.outmark.de



WARNING

 <h2>CAUTION</h2>	WARNING! DO NOT TOUCH THE LENS DO NOT THROW BATTERIES IN FIRE
CLASS 1 LASER PRODUCT KLASSE 1 LASERPRODUKT APPAREIL À LASER DE CLASSE 1	INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM
	

PRECAUTIONS

Follow the advice below for safe and appropriate operations.

ON PLACEMENT

- » Do not use the unit in places which are extremely hot, cold, dusty, or humid.
- » Place the unit on a flat and even surface.
- » Do not restrict the air flow of the unit by placing it in a place with poor air flow, by covering it with a cloth, or by placing it on a carpet.

ON SAFETY

- » When connecting and disconnecting the AC cord, grip the plug and not the cord itself. Pulling the cord may damage it and create hazard.
- » When you are not going to use the unit for a long period of time, disconnect the AC power cord.



ON AC VOLTAGE

- » Before use, check that the rated voltage of your unit matches your local voltage.

ON CONDENSATION


- » When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player.
- » When there is condensation inside the unit, the unit may not function normally.
- » Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.
- » Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation.
- » Ensure that the ventilation is not impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
- » Do not place naked flame sources, such as lighted candles on the apparatus.
- » Take attention to the environmental aspects of battery disposal.
- » Use the apparatus only in moderate climates.
- » Do not expose the apparatus to dripping or splashing.
- » Do not place objects filled with liquids, such as vases, on the apparatus.
- » Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- » The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use.

Should any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.

 <p>The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.</p>	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	 <p>The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.</p>
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


In case of malfunction due to electrostatic discharge, the apparatus has to be reset by disconnecting it from mains supply.
THE MARKING PLATE IS LOCATED AT THE BACK OF ENCLOSURE OF THE APPARATUS.

LOCATION OF CONTROLS

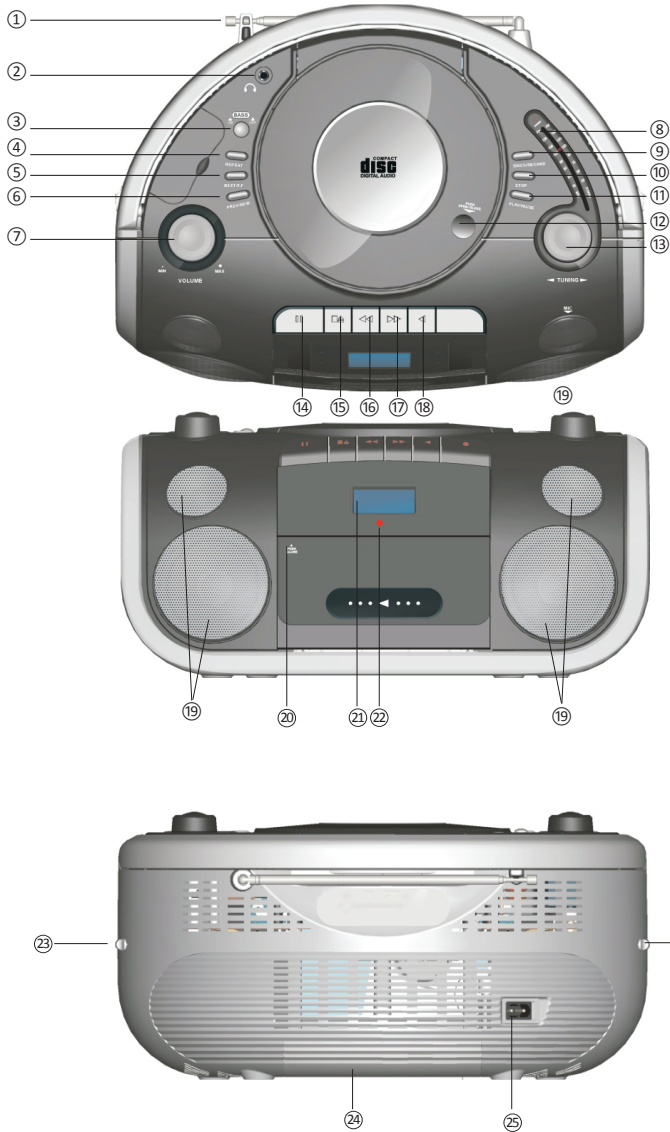

1. Antenna
2. Earphone jack
3. Bass button
4. Repeat button
5. Next/ fast forward button
6. Previous/ fast backward button
7. Volume control
8. Band window
9. Program button
10. Stop button
11. Play/ pause button
12. Push CD OPEN/ CLOSE
13. Radio tuning control
14. Cassette pause button
15. Cassette Stop/ Open button
16. Cassette fast forward button
17. Cassette fast backward button
18. Cassette play button
19. Speaker
20. Cassette close button
21. LCD Display
22. Power indicator
23. Band switch
24. Battery compartment
25. AC socket
26. Function switch

POWER SUPPLY

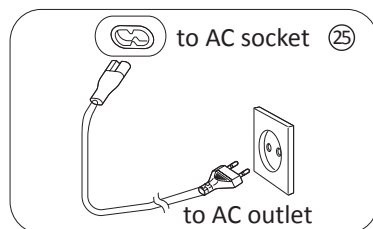

AC POWER OPERATION


Insert one end of the AC power cord into input jack of AC power ②⑤ on the apparatus, the other end into AC outlet. (You can only use the AC power cord provided together with the Radio. Using other types of power cord may cause fire or electric shock.)

USING BATTERIES

Disconnect the AC power cord from the AC socket ②⑤ of the unit. Battery power is cut automatically by the cord while it is connected. Open the battery compartment backward ②④ and insert 8 pieces (C/ UM-2 batteries) batteries to the direction shown by the diagram inside the compartment. Now close the compartment. Replace the batteries when all the broadcast sounds change into noise, the sound is diminishing and starting to be with distortion, the magnetic tape is even motionless or the CD is incapable to read a disc.


NOTE:

Do not mix the batteries of different types, or use the old battery and the new battery together. Never charge or heat or break the battery. When taking out of the battery when it is exhausted, if it is found out that the battery is with leakage, the battery should be taken out of the compartment and the leaked liquid should be thoroughly wiped out.

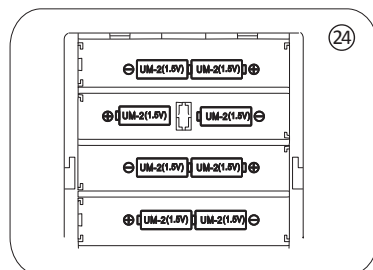

Batteries not included!

TURN ON / OFF THE SYSTEM

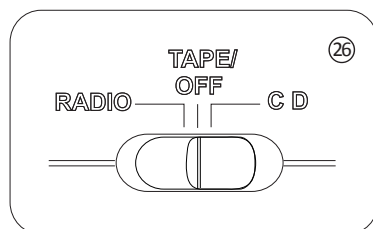

Radio:

After the apparatus is connected to the power, the power supply switch needs to be pushed to the left side (RADIO). Now the Radio is "ON" and the power indicator ② will be lit.


CD:

After the apparatus is connected to the power, the power supply switch needs to be pushed to the right side (CD). Now the CD-Player is "ON" and the power indicator ② will be lit.

TAPE/ OFF:


When the power supply switch is pushed to the middle (TAPE/ OFF), cutting originally the power supply of the player and the power indicator ② will not be lit at this time, but you can of course use the cassette-player to push the play button ⑩.

EARPHONE CONNECTION

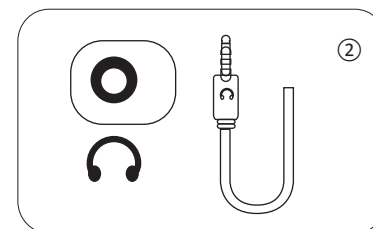


You can use the earphone to listen to the program played by the apparatus and it is only needed to insert the earphone to the earphone jack ②. At this time connected to the jack, the speaker inside the apparatus will be automatically disconnected.

ADJUSTING THE SOUND

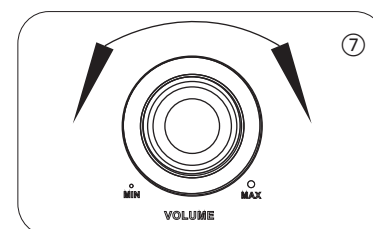

The VOLUME control ⑦ may be adjusted to the left (MIN), it will reduce the volume. If adjusted to the right (MAX), it will level up the volume.









LISTENING TO THE RADIO

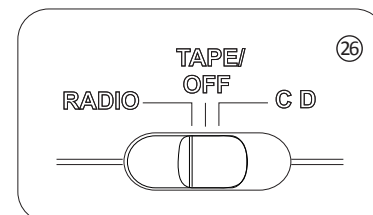

Push the function switch ②⑥ to the left to turn on the radio. Then press the band switch to left or right to select between AM and FM as you desired. Now adjust the Radio tuning control ⑨ and look at the band window ③ where the red dial pointer is switching between the frequencies. Take the frequency you like and enjoy listening to the radio.


During the AM band receiving, please adjust the unit direction to get perfect receiving result and during the FM band receiving, please draw out FM antenna ① and adjust the antenna direction to get the perfect receiving result.

CD PLAYBACK

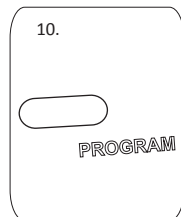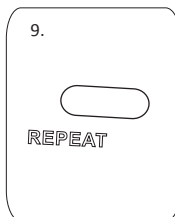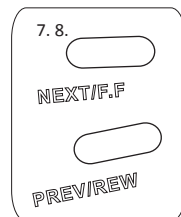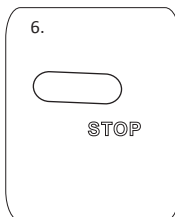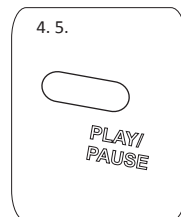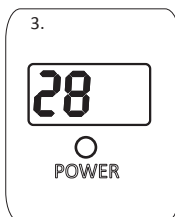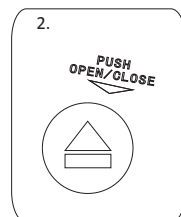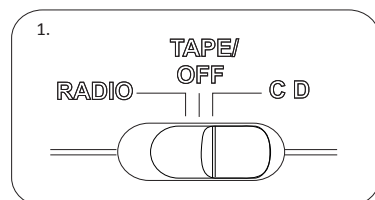


1. Push the FUNCTION SWITCH ② to the right to turn on the CD-Player. The POWER INDICATOR ③ will be lit.
2. Open the CD DOOR by pushing OPEN/CLOSE ④, put the CD (silk-printing side up) on the principle axis of the mechanism and close the CD door.
3. On LCD DISPLAY ⑤ the number of tracks on CD will be shown.
4. Press PLAY/ PAUSE ⑥ to start the playback.
5. Press PLAY/ PAUSE again you can pause playback, to press again to resume playback.
6. If you want to stop the playback, just press the CD STOP button ⑦.
7. During the playback, press the PREVIOUS/ FAST BACKWARD button ⑧, it will skip to the beginning position, continuously press this button for two times, you can skip to the previous song and to press the NEXT/ FAST FORWARD button ⑨, you can skip to the next song.
8. During the playback, press the PREVIOUS/ FAST BACKWARD button ⑧ without loosing and the playback point will fast run back. When it reaches the position you require, let loose the button and the playback starts from reached point. Press the NEXT/ FAST FORWARD button ⑨ without loosing and the playback point will fast run forward until it reaches the position you require. Let loose the button and the playback starts from reached point.
9. During the playback mode, press the REPEAT button ⑩, then it will repeat the playback for the current song. Press the button for second time, it will repeat playback for the whole disc. Press the button for the third time, then it will random play the disc. When you press the button for the fourth time, then you can cancel the repeat operation.
10. During the stop or playback mode you can program playback for the disc. Press the PROGRAM button ⑪ and then press the NEXT/ FAST FORWARD button ⑨ or the PREVIOUS/ FAST BACKWARD button ⑧ to select your desired song number. Then press the PROGRAM button ⑪ again to save it. Do it in the same way until you finish programming all the songs you require. To press the PLAY/ PAUSE button ⑥, it will start playback as per the programmed songs order. The LCD will show PROG. You can program at most 20 songs. When it is not in CD playback mode, the previous program will be automatically cancelled.

LISTENING TO THE TAPE

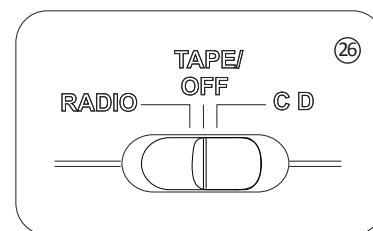


1. Set the FUNCTION switch ② to TAPE position to select tape playback.
2. Press STOP/OPEN button ④ to open the cassette door. Insert prerecorded tape and close the cassette door ④.
3. Press PLAY button ⑥ to start the playback, adjust the VOLUME control ⑦ to the desired listening level.
4. Press the PAUSE button ⑧ to stop playback and resume after pressing the button again.
5. Press FAST FORWARD ⑩ or BACKWARD button ⑨ to fast forward or backward the tape. Press STOP/OPEN button ④ and it will stop working.
6. The playback will automatically stop at the end of the tape. If you want to stop the tape in the halfway, press the STOP/OPEN button ④.

MAINTENANCE

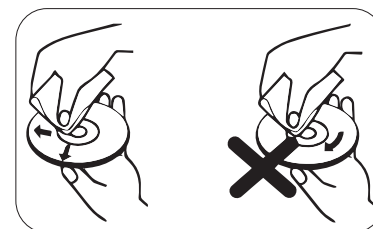

CLEANING CD

If the CD skips or will not play, the disc may need cleaning. Before playing, wipe the disc from the centre out with a cleaning cloth. Do not touch the data surface (the silver surface) to prevent sound deadlock during playback. Do not write or stick label on the disc. After playing the CD, store the disc in its case.

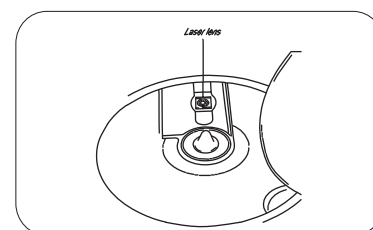

CLEANING THE CD LENS

If the CD lens is dusty, clean it with a brush-blower. Blow several times on the lens and remove the dust with the brush. Finger prints may be removed with a cotton swab moistened with alcohol.

CLEANING THE UNIT

Do not use volatile chemicals on this unit. Clean by lightly wiping with a soft cloth.

IMPORTANT NOTE

If an abnormal display indication or an operating problem occurs, disconnect the AC power cord and remove the batteries. Wait at least 5 seconds, then reconnect the AC power cord or reinstall the batteries.

WARNING

Should the CD door be opened before the reading of the CD completed, a jamming noise may occur. This is resolved by closing the CD door.

IMPORTANT INFORMATION

OUTMARK offers service and warranty in accordance to European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

If this unit is opened or accessed by a non-official service center in any way, the warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.




This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

Declaration of Conformity

Hereby, JD Sales GmbH & Co. KG declares that this product, Outmark Harlekin CDC-1701, meets the essential requirements and other relevant provisions of the following guidelines:

- European Low Voltage Directive 2014 / 35 / EU
- EU Electromagnetic Compatibility Directive 2014 / 53 / EU
- RoHS Directive 2011 / 65 / EU

A copy of the Declaration of Conformity is available at: **see Legal Information in this manual.**

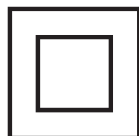

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



WARNING: Prolonged exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.

JD Sales GmbH & Co. KG - All rights reserved ©

SPECIFICATIONS

Power supply	: AC 230V~, 50Hz, 15W or DC 12V (8x1.5V "C" size, UM-2 batteries - not included!)
Output power	: 1.5W + 1.5W
Tape speed	: 4.76cm/sec. ±3%
Wow and flutter	: ≤ 0.5%
CD playback frequency response	: 31.5Hz-16kHz ± 3dB
Whole band frequency response	: 250Hz - 6.3kHz
CD signal/ noise ratio	: ≥ 70dB
CD sampling frequency	: 44.1kHz
Frequency range	: FM: 88-108MHz, AM: 530-1600KHz
Speaker impedance	: 4 Ω + 4 Ω (ohm)
Dimensions	: 324(L) x 236 (W) x 162 (H) mm
Weight	: About 2.33 kg (batteries not included)

Due to continuing improvement, the features and the design are subject to change without notice.

GUIDE FOR SIMPLE FAULT ELIMINATION

Symptoms of failure	Possible causes	Remedy
The player does not work	The power supply plug has not been inserted to the socket properly.	Insert the power supply plug in the socket securely.
	The power switch is not turned on.	Push the power switch to "CD".
Not available to play.	The disc is not placed properly	With the printed surface upward, place the disc properly.
	The disc is not compatible.	Change for the other compatible discs.
	CD door not closed	Close the CD door.
No Sound	Operation method is incorrect.	Operate in conformity with the operation instructions.
	The Volume is adjusted to the smallest.	Adjust for a greater volume.
The sound stops.	The disc or the laser lens is dirty.	Clean the disc. Or laser lens.
	The disc is scoring, scuffing or curl	Change for a good disc.

LEGAL INFORMATION

imported by:

JD Sales GmbH & Co. KG
Winkel 12
24226 Heikendorf
Germany

+49 431 580819-20
service@outmark.de
www.outmark.de

OUTMARK