



EARPHONE WIRELESS + CHARGING BOX

TWS-2001



USER MANUAL

www.outmark.de

Important Safety Instructions



To avoid damaging your hearing:

DANGER

- Limit the amount of time the earphones are used at high volume levels and set the volume to a safe level to avoid hearing loss. The higher the volume, the shorter the safe listening time.

Please note the following information

- Listen to music for a reasonable period of time at an appropriate volume.
- Make sure not to keep increasing the volume as your hearing adapts.
- Do not turn up the volume so much that you cannot hear what is going on going around.
- Be careful in potentially dangerous situations or switch off the Headphones off temporarily.
- Excessive sound pressure from earphones and headphones can lead to hearing loss!
- The use of earphones in both ears while driving will not work recommended and may not be allowed in most areas.
- For your safety, avoid the distraction of music or phone calls in traffic or in other potentially dangerous places.



To avoid damage or malfunction:

ATTENTION

- Lithium battery (ies) included!
- Do not try to open the housing of the product!
- Do not expose the headphones to excessive heat!
- Do not drop your headphones!
- The headphones must not be exposed to drops or splashes!
- Do not immerse your headphones in water!
- Do not use cleaning agents that contain alcohol, ammonia, benzene or Abrasives included!
- If cleaning is required, use to clean the product a soft cloth that, if necessary, with a minimum of water or diluted mild soap is moistened.
- The integrated battery must not be exposed to excessive heat such as sun, fire or like that are exposed!
- Charge the earphones at least once every 6 months!
- Do not store the earphones at extreme temperatures (below 0 ° C or above 45 ° C)!

Product Specification

Model name	TWS-2001
Bluetooth version	V5.0
Bluetooth name	TWS-2001 (L & R ear-bud)
Standby time	Approx. 30 hours
Talking/ Playback Time	Approx. 3 hours
Battery capacity earbuds	2 x 40mAh
Battery capacity box	400mAh
Battery temperature	0°C - 40°C (32°F - 113°F)
Operating Frequency Range	2412~2472 MHz
Max Output Power	8 dbm

Packing List

2 x earbud
1 x charging box
1 x USB-cable
1 x user manual

Product Overview

- 1 Dust-proof mesh
- 2 Multi-function button
- 3 MIC
- 4 LED indicator
- 5 Charging port



Power ON/OFF

1. To power on, press and hold the multi-function button until the red and blue LED flashes alternately.
2. To power off, press and hold the multi-function button until the LED turns red. Or the earbuds are turned off automatically if the earbuds are disconnected from your Bluetooth device for over five minutes.

Pairing Stereo Mode

Connect the two paired earbuds to your smartphone to create stereo sound.

1. Press and hold the multi-function buttons of both earbuds at the same time until the LEDs flash red and blue alternately.
2. Wait 3 seconds to let the earbuds automatically pair with each other.
3. On your smartphone, enable Bluetooth, search and select **"TWS-2001"** to pair. After the earbuds are successfully paired with your smartphone, the blue LED flashes slowly. The earbuds are re-connected automatically to your smartphone after successfully paired.

Mono Mode

Connect either of the earbuds to your smartphone.
Only mono sound is available.

1. Press and hold the multi-function button of the earbud you want to pair until the LED flashes red and blue alternatively.
2. On your smartphone, enable Bluetooth, search and select **"TWS-2001"** to pair.

Note: In mono mode, to change an earbud to be paired with your smartphone, turn off the earbud which is paired with the smartphone, and press and hold the multi-function button of the earbud you want to pair with the smartphone.

Talking Mode

To control phone calls, make sure the earbuds are connected to your smartphone.

When there's an incoming call, the calling numbers are voice broadcast.

To answer the call, press the multi-function button once; to reject the call, long press the multi-function button.

To redial the last phone number during music play, press the multi-function button twice.

Charging the Earbuds

During charging, the red LED turns on. After fully charged, the LED turns off.

Note: When charging, the earbuds are forcibly turned off.

Charging the Charging box

During charging, the red LED flashes. After fully charged, the red LED turns to solid light.

Trouble Shooting

Follow below steps can resolve any pairing or reconnecting issues:

1. In some cases, you might need to re-pair the earbuds with your smartphone when you turn off Bluetooth on your smartphone or turn off the earbuds. To re-pair, follow the steps described in the user manual.
2. Make sure battery dock has enough power ;
3. Put the ear-buds into the dock and recharging for a while.

Disposal Information

Electrical and electronic devices and batteries contain materials components and substances could be harmful to you and your environment, provided that the waste materials (disposed of electrical and electronic Old devices and batteries) are not handled correctly.

Electrical and electronic equipment and batteries are included with the marked crossed-out waste-bin symbol, as shown below.

This symbol means that wasted electrical and electronic equipment as well as Batteries must not be disposed of with household waste, but separately are disposed of.

As endconsumer, it is necessary that you keep your batteries run down and hand them in at the appropriate collection points. That way you pose make sure that the batteries are recycled according to the legislation and do not cause environmental damage.

All cities and municipalities have set up collection points where old electrical and electronic devices and batteries can be handed in to be recycled free of charge or can be collected from households.

Contact your local environmental authority for more information.

Declaration of Conformity

JD Sales GmbH & Co. KG hereby declares that the radio system type **TWS-2001** complies with Directive 2014/53 / EU. The full text of the EU declaration of conformity is available at the following internet address: www.outmark.de - Download area.

Legal Information

JD Sales GmbH & Co. KG Winkel 12 24226 Heikendorf Germany	☎ +49 431 580819-20 ✉ service@outmark.de 🌐 www.outmark.de	  DE47580451
All products can be tacitly changed. Errors and omissions in the operating instructions reserved. ALL RIGHTS RESERVED, COPYRIGHT JD SALES GMBH & CO. KG		